

# | Cleaning Instructions audio-/media guides

We recommend cleaning and then disinfecting the audio/media guides after each use.

## 1. Preparation

Switch off the device.

## 2. Cleaning

- Remove dirt and grease residues from the device using a cleaning agent (glass cleaner, vinegar cleaner or similar).
- Moisten a paper towel with the cleaning agent.
- Wipe the display and other device surfaces with the cloth.
- If necessary, absorb any residual liquid with a dry cloth.

## 3. Disinfection

- Moisten a paper towel with a suitable surface disinfectant.
- Wipe the display and other housing surfaces with the cloth.
- Do not exert excessive pressure, especially when cleaning the display.
- Allow the disinfectant to take effect for at least 30 seconds or to dry by itself. Follow the manufacturer's instructions.

## 4. Storage

Keep disinfected devices either in the charging station or in an distribution box.